

# ASSEMBLY INSTRUCTIONS


ITEM CODE : IN143

ITEM DESCRIPTION : 1 DRAWER BEDSIDE




1

Reverse the bedside & place the leg as shown & align the leg to match the apron.

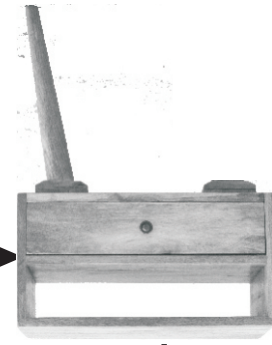

3

Fix the other leg in the similar way

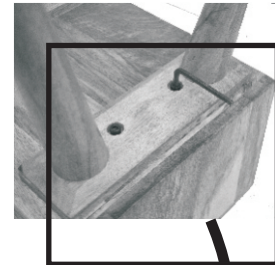

2

Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

Reverse the bedside straight. Now your bedside is ready for use

4

