


# ASSEMBLY INSTRUCTIONS


ITEM CODE : IN 902

ITEM DESCRIPTION: 1 OPEN SLOT 1 DRAWER BEDSIDE

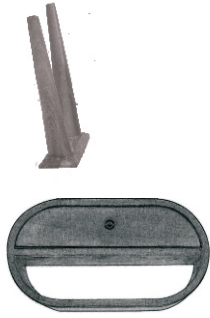


1

Reverse the bedside & place the leg as shown & align the leg to match the apron.

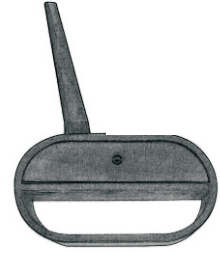

Reverse the bedside straight. Now your bedside is ready for use

4

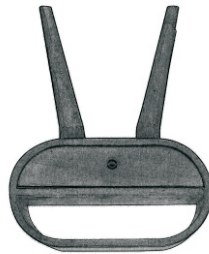

Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

2

3  
Fix the other leg in the similar way

